

Heater: The room air that is passed over the heater is heated to the desired temperature
Humidifier: The heated air passes through the humidifier to be humidified to the desired level
Front Panel: This is used to interface with the machine to get the desired operation