The hover-course control pane	el is located in the cente	er right area of the pilot's l	eft front console (Figure