

Outside the engine, the transmission system sends power from the engine to the driving wheels of the car. (No clutch is necessary in cars with automatic transmission.) A steering system turns the front wheels to guide the car. A clutch disconnects the engine from the gearbox when the driver wants to change gears.